



DWG. NO. NA5-A18LRC  
 MODEL ASGALRC L.H. CONTROL LABELER  
 MAIN COLUMN DRIVE ASSEMBLY

MODEL A5GALRC L.H. CONTROL LABELER MAIN COLUMN DRIVE ASSEMBLY  
DWG. NO. NA5-A18LRC

ITEM NO.	PART NO.	DESCRIPTION
1	NLE-5303	OVERHEAD CARRIER ARM KEY
2	NLE-560	OVERHEAD CARRIER BAR
3	NLE-559D	OVERHEAD CARRIER ARM - D.E.
4	NLE-5333	CARRIER ARM CAP - D.E.
5	NLE-BS8F	BEARING
6	NA5-557RC	COUNTER DRIVE SHAFT
7	NAL-561	SUPPORT SHIELD
8	NL5-5337	DRIVEN PULLEY
9	NAL-5130L6X8	MOTOR DRIVE BELT
10	NL5-5336	DRIVE PULLEY
11	NLE-5335/2	MOTOR 1-1/2 HP (230/460-3-60)
12	NAL-1945	MOTOR MOUNT PLATE
13	NL-5203	BRONZE BUSHING
14	FP-SC10	SET COLLAR
15	NAL-1943	MOTOR ADJUST SLIDE ROD
16	NAL-1940	MOTOR ADJUST SUPPORT
17	NAL-1942	MOTOR ADJUST SLIDE BLOCK
18	NAL-1941	MOTOR ADJUST SLIDE BLOCK
19	NAL-1949	MOTOR SUPPORT BRACE
20	NAL-530	DIAMETER ADJUST BEARING SUPORT
21	NLE-535	DIAMETER ADJUST SPROCKET
22	NMC-149	FLANGE BUSHING
23	NLE-454	HEIGHT ADJUST TAKE-UP ROLLER
24	NLEB-46	BOOSTER DRIVE CAP
25	NLE-566	COUNTER DRIVE SHAFT KEY
26	NAL-5341R	DRIVE SHAFT SCREW-R.H.
27	NLE-596	DRIVE GEAR
28	NAL-520	TUBING THRUST COLLAR
29	NL-B608	THRUST BEARING
30	NLE-522	DIAMETER ADJUST BEVEL PINION
31	NAL-1906	DIAMETER ADJUST GEAR COVER
32	FP-HN08F	PLATED HEX NUT
33	NLE-453	HEIGHT ADJUST STUD WASHER
34	NLE-521	DIAMETER ADJUST BEVEL GEAR
35	NAL-1904	THRUST ADJUST NUT MOUNT
36	NLE-519	THRUST ADJUST NUT
37	NAL-1905	DIAMETER ADJUST SCREW FILLER
38	NAL-1903	DIAMETER ADJUST GEAR SUPPORT
39	NAL-BS11RF	BEARING
40	NLE-5302	COLUMN DRIVE TUBE KEY
41	NAL-591	DRIVE MITER GEAR

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.  
AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.  
P.O. BOX 467 210 BLETNER AVENUE  
HANOVER, PA. 17331  
TEL. (717) 637-2133 OR 637-8998  
FAX. (717) 637-2966 WEB SITE: [www.labeler.com](http://www.labeler.com)

## MODEL ASGALRC L.H. CONTROL LABELER MAIN COLUMN DRIVE ASSEMBLY

DWG. NO. NA5-A18LRC

ITEM NO.	PART NO.	DESCRIPTION
42	NA5-515	DRIVE TUBE
43	NAL-110	SUPPORT TUBE
44	NAL-17	DISCHARGE END PLATE
45	NAL-1992L	REDUCTION HOUSING EXTENSION
46	NAL-10AL	REAR SIDE PLATE
47	NAL-51	REDUCTION HOUSING
48	NAL-A575RC	MOTOR BELT GUARD ASSEMBLY
49	NAL-10L	MAIN FRAME PLATE
50	NLE-56	COLUMN COVER PLATE
51	NAL-1952	LEG MOUNT BLOCK
52	NAL-1951	LEG MOUNT BLOCK
53	NAL-1950D	LEG - DISCHARGE END
54	NAL-W1953LR	LEG EXTENSION WELDMENT
55	NAL-W1953LL	LEG EXTENSION WELDMENT
56	NL-B2230	BEARING
57	NLE-DS353	OIL SEAL
58	NAL-5341L	DRIVE SHAFT SCREW-L.H.
59	NLE-540	DRIVE HOUSING CAP - REAR
60	NLE-5101	DRIVE SHAFT-14 TEETH
61	NLE-DS89	OIL SEAL
62	NLE-BFS180X1	BEARING
63	NAL-573	DRIVE SHAFT BEARING SUPPORT
64	NLE-599	MAIN DRIVE SPUR GEAR- 84 TEETH
65	NLE-55	REDUCTION HOUSING COVER
66	NAL-597RC	PASTE POT DRIVE SHAFT
67	NLE-DS221	OIL SEAL
68	NLE-510	REDUCTION COVER CAP
69	NAL-525	DIAMETER ADJUST SHAFT
70	NAL-546L	DIAMETER ADJUSTMENT CHAIN
71	NA-W536F	CHAIN TAKE-UP BRACKET WELDMENT
72	NA5-517	DIAMETER ADJUSTING SCREW
73	NAL-1999RC	HEIGHT ADJUST SHAFT SUPPORT
74	NA5-A52F	CARRIER FRAME SUPPORT ASSEMBLY
75	NLE-518R	DIAMETER ADJUST SCREW SLEEVE-R.H.
76	NAL-1901	DIAMETER SCREW SLEEVE MOUNT
77	NAL-1902	DIAMETER SCREW SLEEVE SUPPORT
78	NAL-1996	DISCHARGE END SUPPORT TUBE BRACE
79	NAL-1995	DISCHARGE END PLATE FILLER
80	NA-PF12	3/8" NPT B.I. PIPE PLUG
81	NA-PF18	1/2-3/8 NPT B.I. PIPE BUSHING
82	NA-PF10	1/8" NPT B.I. PIPE PLUG
83	NAL-574	DRIVE SHAFT BEARING SUPPORT
84	NAL-575	DRIVE SHAFT BEARING SPACER

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.  
AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.  
P.O. BOX 467 210 BLETNER AVENUE  
HANOVER, PA. 17331  
TEL. (717) 637-2133 OR 637-8998  
FAX. (717) 637-2966 WEB SITE: [www.labeler.com](http://www.labeler.com)