



DWG. NO. NAL-A19L
 MODEL A7/AP LABELER
 FEED END COLUMN SUPPORT ASSY.

MODEL A7/AP LABELER FEED END COLUMN SUPPORT ASSEMBLY
 DWG. NO. NAL-A19L

| ITEM NO. | PART NO. | DESCRIPTION |
|----------|-----------|-----------------------------------|
| 1 | NAL-546L | DIAMETER ADJUSTMENT CHAIN |
| 2 | NA-W536F | CHAIN TAKE-UP BRACKET WELDMENT |
| 3 | NAL-517 | DIAMETER ADJUSTING SCREW |
| 4 | NAL-1999 | HEIGHT ADJUST SHAFT SUPPORT |
| 5 | NLE-56 | COLUMN COVER PLATE |
| 6 | NAL-A52F | CARRIER FRAME SUPPORT ASSEMBLY |
| 7 | NLE-518R | DIAMETER ADJUST SCREW SLEEVE-R.H. |
| 8 | NLE-565 | BRONZE BUSHING |
| 9 | NAL-1901 | DIAMETER SCREW SLEEVE MOUNT |
| 10 | NAL-1902 | DIAMETER SCREW SLEEVE SUPPORT |
| 11 | NAL-1908 | DIAMETER ADJUST STOP PLATE |
| 12 | NAL-1909 | DIAMETER ADJUST STOP BLOCK |
| 13 | NAL-110 | SUPPORT TUBE |
| 14 | NAL-1991L | FEED END TUBE SUPPORT |
| 15 | NMC-149 | FLANGE BUSHING |
| 16 | NLE-522 | DIAMETER ADJUST BEVEL PINION |
| 17 | NAL-1906 | DIAMETER ADJUST GEAR COVER |
| 18 | FP-HN08F | PLATED HEX NUT |
| 19 | NLE-453 | HEIGHT ADJUST STUD WASHER |
| 20 | NLE-521 | DIAMETER ADJUST BEVEL GEAR |
| 21 | NAL-1904 | THRUST ADJUST NUT MOUNT |
| 22 | NLE-519 | THRUST ADJUST NUT |
| 23 | NAL-1905 | DIAMETER ADJUST SCREW FILLER |
| 24 | NAL-1903 | DIAMETER ADJUST GEAR SUPPORT |
| 25 | NAL-10AL | REAR SIDE PLATE |
| 26 | NAL-530 | DIAMETER ADJUST BEARING SUPPORT |
| 27 | NLE-535 | DIAMETER ADJUST SPROCKET |
| 28 | NLE-454 | HEIGHT ADJUST TAKE-UP ROLLER |
| 29 | NAL-561 | SUPPORT SHIELD |
| 30 | NAL-557 | COUNTER DRIVE SHAFT |
| 31 | NLE-BS8F | BEARING |
| 32 | NLE-5201 | SPACER DRIVE HOUSING |
| 33 | NLE-5105 | DRIVE GEAR FILLER |
| 34 | NAL-5341L | DRIVE SHAFT SCREW-L.H. |
| 35 | NAL-523 | DIAMETER ADJUST DRIVE SHAFT |
| 36 | NLE-2251 | BRONZE BUSHING |
| 37 | NLE-524 | ADJUST HANDWHEEL |
| 38 | NAL-1907 | DIAMETER ADJUST SHAFT SUPPORT |
| 39 | NLE-5303 | OVERHEAD CARRIER ARM KEY |
| 40 | NLE-560HD | OVERHEAD CARRIER BAR - HD |
| 41 | NLE-559F | OVERHEAD CARRIER ARM - F.E. |
| 42 | NLE-5334 | CARRIER ARM CAP - FEED END |
| 43 | NLE-A562 | DIAMETER GAUGE |
| 44 | NLE-563 | DIAMETER GAUGE BRACKET |
| 45 | NAL-16L | FEED END PLATE |

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.
 AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.
 P.O. BOX 467 210 BLETTNER AVENUE
 HANOVER, PA. 17331
 TEL. (717) 637-2133 OR 637-8998
 FAX. (717) 637-2966 WEB SITE: www.labeler.com

MODEL A7/AP LABELER FEED END COLUMN SUPPORT ASSEMBLY
DWG. NO. NAL-A19L

| ITEM NO. | PART NO. | DESCRIPTION |
|----------|-------------|------------------------|
| 46 | NAL-1993L | FEED END PLATE BRACE |
| 47 | NAL-1931 | GUM POT RACK SUPPORT |
| 48 | NAL-10L | MAIN FRAME PLATE |
| 49 | NAL-1952 | LEG MOUNT BLOCK |
| 50 | NAL-1951 | LEG MOUNT BLOCK |
| 51 | NAL-1950F | LEG - FEED END |
| 52 | NAL-W1953LL | LEG EXTENSION WELDMENT |
| 53 | NAL-W1953LR | LEG EXTENSION WELDMENT |

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.
AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.
P.O. BOX 467 210 BLETTNER AVENUE
HANOVER, PA. 17331
TEL. (717) 637-2133 OR 637-8998
FAX. (717) 637-2966 WEB SITE: www.labeler.com