



MODEL 5GAL LABELER DISCHARGE END COLUMN SUPPORT AND DRIVE ASSEMBLY
 DWG. NO. NL5-A18

| ITEM NO. | PART NO. | DESCRIPTION |
|----------|--------------|--|
| 1 | NLE-5303 | OVERHEAD CARRIER ARM KEY |
| 2 | NLE-560 | OVERHEAD CARRIER BAR |
| 3 | NLE-559D | OVERHEAD CARRIER ARM - D.E. |
| 4 | NLE-5333 | CARRIER ARM CAP - D.E. |
| 5 | NLE-BS8F | BEARING |
| 6 | NLE-W111 | COLUMN CROSS TIE ROD |
| 7 | NLE-155 | SUPPORT BRACKET |
| 8 | NLE-18 | COLUMN COVER PLATE |
| 9 | NLE-17L | FRONT MAIN COLUMN - D.E. |
| 10 | NLE-124 | COLUMN COVER PLATE |
| 11 | NAL-561 | SUPPORT SHIELD |
| 12 | NL5-597 | COLUMN DRIVE SHAFT - D.E. |
| 13 | NA-PF10 | 1/8" NPT B.I. PIPE PLUG |
| 14 | NLE-126 | COLUMN CLAMP BUSHING |
| 15 | NL5-A51 | REDUCTION HOUSING ASSEMBLY |
| 16 | NLE-56 | COLUMN COVER PLATE |
| 17 | NA-PF12 | 3/8" NPT B.I. PIPE PLUG |
| 18 | NA-PF18 | 1/2-3/8 NPT B.I. PIPE BUSHING |
| 19 | NLE-520 | TUBING THRUST COLLAR |
| 20 | NLE-543 | THRUST WASHER |
| 21 | NL5-537 | REAR MAIN COLUMN GUARD |
| 22 | NLE-110/L | REAR MAIN COLUMN - D.E. |
| 23 | NL5-516 | COLUMN DRIVE TUBING - D.E. |
| 24 | NLE-592 | PASTE POT DRIVE MITER GEAR |
| 25 | F-WK09 | WOODRUFF KEY |
| 26 | NLE-591 | PASTE POT DRIVE GEAR |
| 27 | NLE-5302 | COLUMN DRIVE TUBE KEY |
| 28 | NLE-BS11RF | BEARING |
| 29 | NL5-517L | DIAMETER ADJUST SCREW - D.E. - L.H. |
| 30 | NLE-521 | DIAMETER ADJUST BEVEL GEAR |
| 31 | F-WK07 | WOODRUFF KEY |
| 32 | NLE-519 | THRUST ADJUST NUT |
| 33 | FP-HN08F | PLATED HEX NUT |
| 34 | NLE-518L | DIAMETER ADJUST SCREW SLEEVE - D.E. - L.H. |
| 35 | NLE-595 | DRIVE GEAR |
| 36 | NLE-599 | MAIN DRIVE SPUR GEAR - 84T |
| 37 | NLE-566 | COUNTER DRIVE SHAFT KEY |
| 38 | NLE-55 | REDUCTION HOUSING COVER |
| 39 | NLE-DS221 | OIL SEAL |
| 40 | NL-B2230 | BEARING |
| 41 | NLE-510 | REDUCTION COVER CAP |
| 42 | NLE-BFS180X1 | BEARING |
| 43 | NLE-DS219 | OIL SEAL |
| 44 | NLE-532 | BEARING RETAINER BUSHING |

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.
 AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.
 P.O. BOX 467 210 BLETTNER AVENUE
 HANOVER, PA. 17331
 TEL. (717) 637-2133 OR 637-8998
 FAX. (717) 637-2966 WEB SITE: www.labeler.com

MODEL 5GAL LABELER DISCHARGE END COLUMN SUPPORT AND DRIVE ASSEMBLY
DWG. NO. NL5-A18

| ITEM NO. | PART NO. | DESCRIPTION |
|----------|-----------|----------------------------------|
| 45 | NLE-522 | DIAMETER ADJUST BEVEL PINION |
| 46 | F-WK11 | WOODRUFF KEY |
| 47 | NLE-OS147 | OIL SEAL |
| 48 | NLE-453 | ADJUST WASHER |
| 49 | NLE-OS353 | OIL SEAL |
| 50 | NLE-5341 | COUNTER DRIVE SHAFT SCREW |
| 51 | NLE-596 | DRIVE GEAR |
| 52 | NLE-5101 | DRIVE SHAFT - 14 TEETH |
| 53 | NLE-OS89 | OIL SEAL |
| 54 | NLE-540 | DRIVE HOUSING CAP |
| 55 | NLE-529L | INTERMEDIATE ADJUST SHAFT - D.E. |
| 56 | NLE-538A | DIAMETER ADJUST SHAFT SUPPORT |
| 57 | NS-143 | SPLIT SHAFT COUPLING |

WHEN ORDERING REPAIR PARTS, GIVE MODEL NO., MACHINE NO. & SERIAL NO.
AS WELL AS PART NUMBER AND NAME.

NEW WAY PACKAGING MACHINERY, INC.
P.O. BOX 467 210 BLETTNER AVENUE
HANDOVER, PA. 17331
TEL. (717) 637-2133 OR 637-8998
FAX. (717) 637-2966 WEB SITE: www.labeler.com