


SPRINGS SHOULD BE PUSHED AGAINST TRACKS BEFORE CLAMPING

SPRINGS SHOULD EXTEND APPROXIMATELY 3/16" BEYOND END OF LABELS AS SHOWN

SET SPRINGS TO HAVE SLIGHT PRESSURE ON LABEL PACK TO HOLD CORNERS FLAT

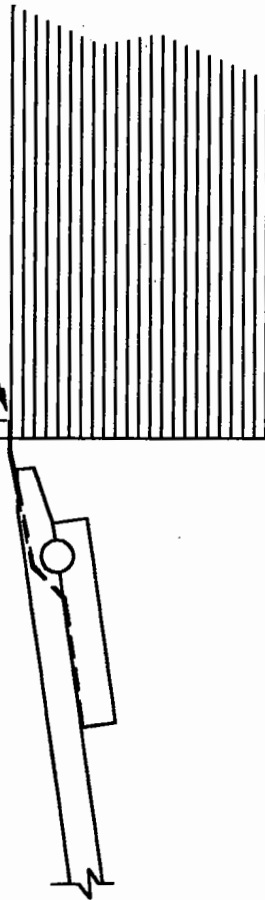

# VIEW SHOWING PROPER SETTING OF LABEL RETAINER SPRINGS